



demitasse cup

285259 2.6" x 2.5" 3.0 oz (36) ♥
use saucer 286918



cup

285168 3.5" 6.1 oz (36) ♥ ✖
use saucer 286918

285176 4.4" 9.1 oz (36) ♥ ✖
use saucer 286918

285185 4.4" 12.5 oz (36) ♥
use saucer 286935



cup stackable

285218 2.1" x 3.3" 6.1 oz (36) ♥
use saucer 286918



mug

285628 3.3" 9.5 oz (36) ♥ ✖
use saucer 286918



dual well saucer

286918 5.9" (36) ♥ ✖
286935 7.1" (36) ♥



sugar bowl, complete

284968 3.6" 6.1 oz (36)

sugar bowl, bottom

284969 3.6" 6.1 oz (36) ♥

sugar bowl, lid

284970 (12) ♥



creamer, no handle

284605 2.4" 1.7 oz (36) ♥



creamer, with handle

284715 4.4" 5.1 oz (36) ♥



coffee pot, complete

284130 5.3" x 6.1" 10.1 oz (36) ♥

coffee pot, bottom

284131 5.3" x 6.1" 10.1 oz (36)

coffee pot, lid

284132 (36)



tea pot, complete

284350 4.8" x 7.7" 18.6 oz (12) ♥

tea pot, bottom

284351 4.8" x 7.7" 18.6 oz (24)

tea pot, lid

284352 (36) ♥



salt shaker

554010 2.7" (36) ♥



pepper shaker

554020 2.7" (36) ♥



flower vase

198100 5.0" (36)



candle holder

557700 (36)