



Banquet Rim Plate 6300P307 D 11 1/4"



Pasta Plate 6300P594 D 11 1/4" (5 1/2" Well)



Noodle Bowl
6300P049 D 9" H 3 3/8" (32 oz)



Bowl
6300P044* D 7 7/8" H 3 3/8" (33 oz) (fits Cloche P045)
6300P043 D 6 5/8" H 2 3/4" (19 oz) (fits Cloche P042)
6300P040 D 5 1/2" H 2 3/8" (10 oz) (fits Cloche P041)
Soup Bowl Underliner
6300P239 (Fits 6300P044)
6300P184* (Fits 6300P040)
6300P239 (Fits 6300P043)



Rim Soup
6300P065 D 9 1/2" H 1 5/8" (18 oz)



Soup/Cereal Bowl
6300P055 D 7" H 2 1/8" (10 oz)



Rice Bowl
6300P350 D 4 1/2" H 2 1/4" (10 oz)
6300P351 D 4 1/8" H 2 1/8" (8 1/2 oz)
Coupe Saucer
6300P352 D 6 1/2" (Fits P350, P351)



Footed Bowl
6300P067
D 5 1/8" H 2 1/8" (12 oz)



Cream Soup
6300P064* Handled L 6 1/4" H 2 1/2" (10 oz)
6300P069 Unhandled L 4 5/8" H 2 1/2" (10 oz)
Saucer
6300P457 Aura Universal Saucer D 6 1/2"
(Fits P064, P069, P171, 174)
6300P182 D 7" (Fits P064, P069, P151)



Sugar Bowl
6300P151 D 4 1/4" H 2" (8 oz)
Sugar Bowl Saucer
6300P182 D 7"
(Fits P151, P064, P069)



Stack Bouillon
6300P075 D 3 1/4" H 2 5/8" (8 oz)
Saucer
6300P180 D 6 1/4"



Slant Bowl
6300P248
D 3 1/2" H 2" (2 oz)
(fits Rect. Tray P249)



Sauce Dish
6300P162
D 4 1/4" H 7/8" (2 3/4 oz)



Coupe Sauce Dish
6300P353
Large D 4 3/8" H 1 1/8" (3 1/2 oz)
6300P354
Small D 3 1/2" H 1" (1 oz)



Sauce Bowl
6300P255
D 3" H 7/8" (1/2 oz)



Sauce Dish
6300P256
D 3" H 3/4" (1/2 oz)



Spoon Rest
6302P247 L 5 1/8"
Spoon Rest
6300P357
(Fits 6302P247)