



## NE-1880 FULL 1/1 GASTRONORM MICROWAVE

This robust oven handles the most rigorous of duties. With power of up to 1800W plus the large capacity, it can sustain consistently fast output - making it the ideal choice for cooking multiple dishes simultaneously. Capable of taking two 1:1, 10cm Gastronorm dishes, or with the shelf removed one 1:1, 20cm Gastronorm dish.



Microwave  
1800W



## NE-1880 TOUCH

- 4 power levels
- Quad Emission. 4 magnetrons and rotating wave guides for fast and even heating
- Positive action dial control timer
- Stainless steel body and cavity
- Removable shelf
- Pull-to-open drop down door
- Cycle counter – records number of operations
- Programmable touch controls
- 16 programs to include 2 and 3 stage heating
- Program lock allows one touch operation
- Manual heating with repeat function
- Accommodate Gastronorm 1/1 (530 x 325mm) containers in 2 layers

NE-1880 Touch Specifications		
Power Source	50Hz, single phase 230-240 V	
Required Power	14.8A 3400 W	
Frequency	2450 MHz	
Outer Dimensions	650x526x471mm	
Oven Dimensions	535x330x250mm	
Output*	High	1800 W
	Medium	900 W
	Low	340 W
	Defrost	170 W
	Stand	0 W
Timer	High	15 min
	Medium	15 min
	Low	60 min
	Defrost	60 min
	Stand	60 min
Programs	16	
Memory	3 stage	
Net Weight	54 kg	
Cubic Capacity	44 litres (1.56 cu. ft)	

\*IEC 705 - 88 Test Procedure  
Specifications subject to change without notice

## PROGRAM LOCK

To allow one touch operation, especially for applications such as sites where a variety of regular programs are used, fast food sites and where de-skilling has been implemented.

## PROGRAMMABLE MEMORY PADS

The power level and heating time for regular dishes can be programmed into the 16 memory pads for speed of operation and consistent results.

## PLACEMENT OF YOUR OVEN

- Oven must be placed on a flat, stable surface. For proper operation, the oven must have sufficient air flow.
- A gap of at least 5cm (2") must be available at the right and left hand sides and back wall of the oven.
- A minimum space of 20cm (8") must be left above the oven and the 2 exhaust vents at the rear.
- Do not place the oven on a shelf directly above or beside a gas or electric hob or cooker. This may cause damage to the oven.
- It is dangerous to position this oven on a shelf which is so high that food and accessories cannot be safely removed by the user.
- Do NOT attempt to stack these ovens.

## 2 & 3 STAGE HEATING

Allows the power level to change during heating e.g. 'Defrost' for 3 minutes, then 'High' for 1 minute in a single operation thus freeing the operator from constant attendance to reset controls.

## POWER SUPPLY

NE-1880 20 amp, hardwired



For further information,  
Email: [commercial\\_ovens@eu.panasonic.com](mailto:commercial_ovens@eu.panasonic.com)  
Visit: [www.panasonic.co.uk/professionalkitchen](http://www.panasonic.co.uk/professionalkitchen)