

Coupe Plate
 6900E439 D 11 3/4"
 6900E440 D 10 1/4"
 6900E441 D 8"
 6900E442 D 5 3/4"



 
Form Plate
 6900E572 D 9"
 6900E573 D 5 3/8"



Oval Coupe Plate
 6900E410 L 10" W 7 1/2"
 6900E409 L 8" W 6"



Oval Bowl
 6900E588 L 10" W 6 1/4" H 2 3/4" (30 oz)
 6900E587 L 8" W 5" H 2 1/4" (15 1/2 oz)
 6900E586 L 6" W 3 3/4" H 1 3/4" (7 oz)
 6900E585 L 4" W 2 1/2" H 1 1/8" (1 3/4 oz)



Romano Bowl
 6900E562
 D 8" H 4" (38 oz)



Cereal Bowl
 6900E517
 D 7" H 2 1/8" (16 oz)



Rice Bowl
 6900E550
 D 5 1/2" H 2 1/2" (16 oz)
 6900E551
 D 4 1/4" H 2" (8 oz)



Bouillon Cup
 6900E428
 D 4" H 2 1/4" (7 1/2 oz)
 (Fits E530)



Form Fruit Dish
 6900E575
 D 4 3/8" H 1 1/2" (4 3/4 oz)



Oval Tray
 6900E401 L 7 1/4" W 5 1/8"



Symphony Cup
 6900E509 L 4 3/8" H 3" (7 oz)
 Saucer Double Well
 6900E530 D 6 1/4"



Coupe Mug
 6900JH6056
 L 5 1/4" H 4 1/8" (15 1/2 oz)



Mug
 6900E438
 L 4 3/4" H 4 3/4" (12 oz)
 6900E584
 L 4" H 4 3/8" (10 oz)



Form Mug
 6900E437 W 4 3/4" H 3 7/8" (13 oz)
 6900E574 W 4 1/2" H 3 3/4" (9 oz)
 Saucer Double Well
 6900E530 D 6 1/4" (Fits E437, E574)