



**Bowl (Tall Square)**  
F801 714S (5" / 12.5 cm), 3 doz.  
15 ½ oz. / 45.8 cl



**Bowl (Low Square)**  
F801 713S (5 ¾" / 13.7 cm), 3 doz.  
11 ¼ oz. / 34.9 cl



**Bowl (Square)**  
F801 704S (3 ½" / 8.9 cm), 3 doz.  
11 ¼ oz. / 34.9 cl



**Plate**  
F801 107S (4 ½" / 11.4 cm), 3 doz.



**Sauce Dish**  
F801 952 (2 ⅞" / 7.3 cm), 6 doz.  
2 oz. / 5.9 cl



**Sauce Dish (Square)**  
F801 953 (3 ¼" / 8.3 cm), 6 doz.  
4 oz. / 11.8 cl



**Sauce Dish**  
F801 951 (4 ¼" x 2 ⅞" / 10.8cm x 5.4 cm), 6 doz.  
2 oz. / 5.9 cl



**Casserole (Covered)**  
F801 676 (6¼" / 15.8 cm), 3 doz.  
6¾ oz. / 20 cl



**Soufflé**  
F801 600 (3 ⅝" / 9.2 cm), 2 doz.  
5 oz. / 17.7 cl  
F801 603 (4 ⅝" / 11.7 cm), 1 doz.  
10 oz. / 29.6 cl



**Shirred Egg**  
F801 691 (7 ⅝" x 6 ¼" / 19.4 cm x 15.8 cm), 2 doz.  
8 oz. / 23.7 cl



**Mini Au Gratin**  
F801 601M (3 ¼" / 8.3 cm), 6 doz.  
1 oz. / 3 cl



**Mini Frypan**  
F801 660M (4 ⅞" / 10.5 cm), 6 doz.  
1 oz. / 3 cl



**Mini Ramekin**  
F801 610M (2 ⅜" / 6 cm), 6 doz.  
1 ½ oz. / 4.4 cl



**Ramekin Fluted, White**  
F801 610 (1 ½" / 3.8 cm), 3 doz.  
1 oz. / 4.4 cl  
F801 612 (2 ½" / 6.4 cm), 3 doz.  
2 ½ oz. / 7.4 cl  
F801 614 (1 ¾" / 4.5 cm), 3 doz.  
3 oz. / 8.9 cl



**Ramekin**  
F800 610 (2 ⅝" / 6.7 cm), 3 doz.  
2 oz. / 5.9 cl  
F800 613 (3" / 7.6 cm), 3 doz.  
3 ½ oz. / 10.4 cl  
F800 614 (2 ¾" / 7 cm), 3 doz.  
2 ½ oz. / 7.4 cl



**Sauce Boat**  
F801 820 (5 ¼" / 11.4 cm), 2 doz.  
3 ¾ oz. / 11.2 cl

(continued on next page)