



**bowl**  
**716526** 4.1" 9.1oz (36) ♥  
use with saucer 716918, 717188



**cream soup cup**  
**712726** 4.1" 8.8oz (36) ♥  
use saucer 716918, 717118



**cream soup cup stackable**  
**712826** 3.9" 9.1oz (36)  
use saucer 716915



**demitasse cup**  
**715159** 2.4" 3.0oz (36) ♥ ☼  
use saucer 716909, 717009



**cup**  
**715168** 3.0" 6.1oz (36) ♥ ☼  
use saucer 716918, 717118  
**715172** 3.0" 7.4 oz (36) ♥ ☼  
use saucer 716918, 717118



**cup**  
**715176** 4.1" 8.8oz (36) ♥ ☼  
use saucer 716918, 717118  
**715190** 4.7" 14.9oz (36) ♥ ☼  
use saucer 716940, 706885



**cup**  
**715626** 3.0" 8.8oz (36) ♥ ☼  
use saucer 716918, 717118  
**715628** 3.0" 9.5oz (36) ♥ ☼  
use saucer 716918, 717118



**tea cup, no handle**  
**715315** 3.4" 5.1oz (36) ♥ ☼  
use saucer 716918



**tea cup**  
**725172** 4.1" 7.4oz (36) ♥ ☼  
use saucer 716918



**mug stackable**  
**715317** 2.8" 6.4oz (36) ♥  
use saucer 716915, formerly 195317



**demitasse saucer**  
**716909** 4.7" (36) ♥ ☼



**demitasse saucer triangle**  
**717009** 4.4" (36) ♥ ☼



**saucer**  
**716918** 5.9" (36) ♥ ☼  
**716940** 7.5" (36) ♥



**saucer square**  
**717118** 5.9" (36) ♥ ☼



**saucer**  
**716915** 5.8" (36) ♥  
formerly 196915